 


180.1910.1
180.1910.24HS

 


Tel: +49(0) 7662/233 - Fax: /8384
info@landtechnik-sexauer.de




142.602.18 —

180.620.11 30RPM HS



142.602.18 —

 180.620.4 8.5RPM



— 180.232.6

180.232.5

180.507.12 —

180.602.49 —

180.507.13 —

180.1009.1 x2

180.306.1 x2

180.602.30

180.1603.18 x2

180.1603.21 x2

180.4.8 —

68.602.9 —

180.602.44 —

180.602.44 —

180.1506.26 —

180.1617.6

280.507.8 —

75.1003.23 —

180.102.14 —

180.301.24 —

180.1904.1 —

180.602.50

180.602.50

180.1304.56 —

180.218.2 —

180.1603.19 —

180.1604.8 —

180.1709.1 —

180.1504.23 —

180.1603.16

180.1603.16

180.602.48

180.107.69

CODICE/CODE

ricambio/spare part

CODICE/CODE

sottoinsieme/subassembly

CODICE/CODE

insieme base/basic assembly

CODICE/CODE

contenuto nel kit ricambio
included in spare parts kit

COME SI ORDINA/HOW TO ORDER

CODICE
code

180.302.31

KIT RICAMBIO
spare parts kit